



4. Set WiFi connection on PC

Notice: The setting hereinafter is operated with Windows XP for reference only. If other operating systems are used, please follow the corresponding procedures.

1. Prepare a computer or device with WiFi, e.g. tablet PC and smartphone with WiFi function.
2. Obtain an IP address automatically.
3. Set WiFi connection to the logger
- 3.1 Open wireless network connection and click View Wireless Networks

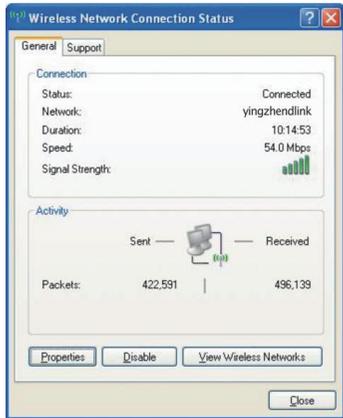

- 3.2 Select wireless network of the logger. The network name consists of AP and the serial number of the product. Input the password shown on the logger. Then click Connect.

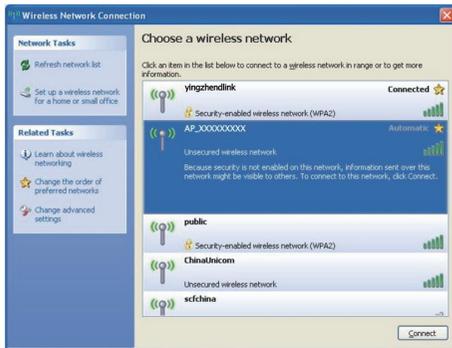


Notice: If AP_(serial number of product) is not available in the wireless network list, there may be problems in the connection or setting of logger. Please wait several minutes to refresh the list or plug in the logger again.

4. Set parameters of logger

- 4.1 Open a web browser, and enter 10.10.100.254, then fill in username and password, both of which are admin as default.

Recommended browsers: Internet Explorer 8+, Google Chrome 15+, Firefox 10+

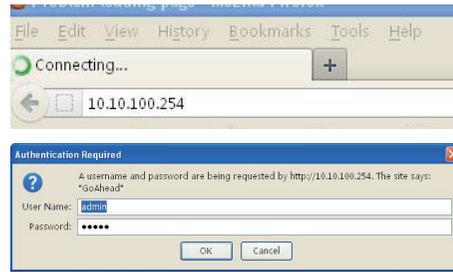


- 4.2 In the Status page, you can view general information of the logger.



- 4.3 Follow the setup wizard to start quick setting.

- (a) Click Wizard to start. Select the wireless network you need to connect, then click Next

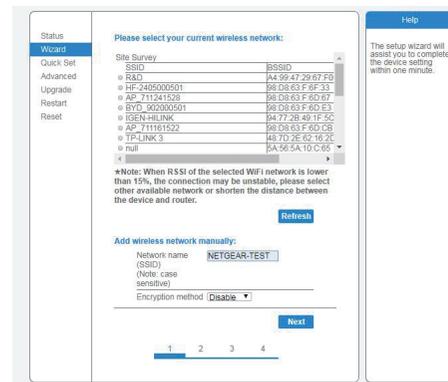

Notice: If the signal strength (RSSI) of the selected network is <15%, which means unstable connection, please adjust the antenna of the router, or use a repeater to enhance the signal.

The SSID of your selected router network should be less than 30 characters, in which blank space should not be included.


- (b) Enter the password for the selected network, select Enable to obtain an IP address automatically, then click Next.




Notice: Router password cannot be recognized if it contains any character such as '&', '#', '%', and blank space.

The password is being verified, please wait for a while. If you have entered an invalid password or encryption method, an error notice will pop up.

- (c) Enhance security settings of the WiFi logger by selecting any options as listed, then click Next.

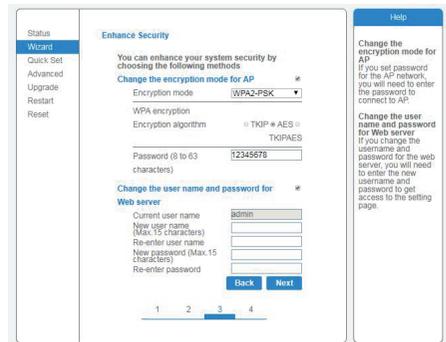


- (d) If setting is successful, the following page will display. Click OK to restart.

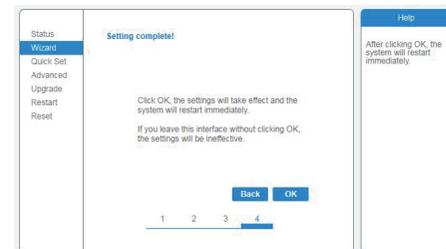

- (e) If restart is successful, the following page will display. If this page does not display automatically, please refresh your browser.



- (j) Re-log in this setting page to Status page after the Web server restart, and check the network connection status of the logger.

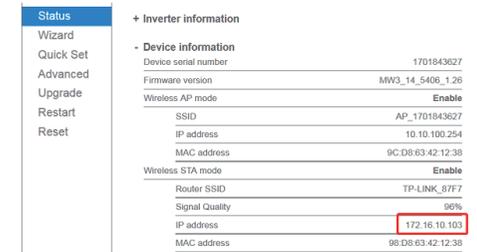

Notice: After network setting is complete, the Wireless AP mode should be enabled and relative information of your router will display on the interface automatically. Besides the Remote server A should be connected. If you meet any problems and need support, please provide the screenshot of the status page as shown below.

